 
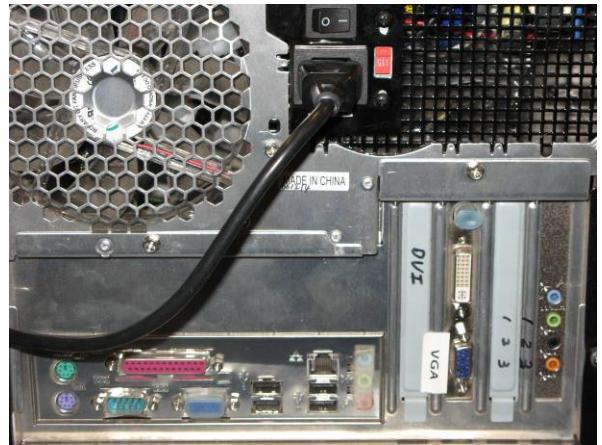 



Instruction for your HotSeat Advanced Simulation PC

Thank you very much for choosing our **HotSeat Advanced Simulation PC**. We are very determined that you be totally satisfied. The software has been installed and tested by us. Please read these simple instructions for installing your PC.

Locate and remove the computer from the original shipping box. Carefully open the box and remove the PC. Make sure to save all information and disks and place them in a safe place. There are several, easy connections you must make in the back of the computer for your HotSeat Chassis to work properly.

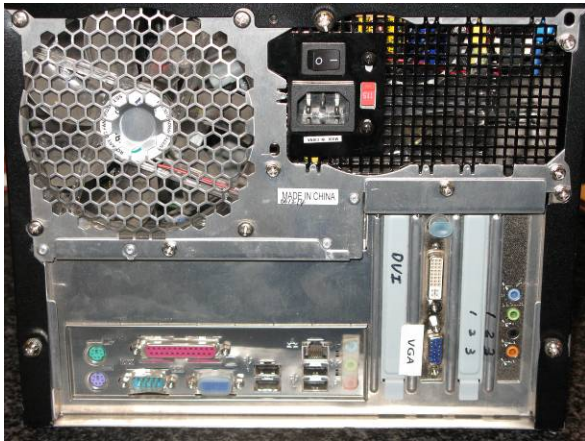

 Install the AC power cord to the PC

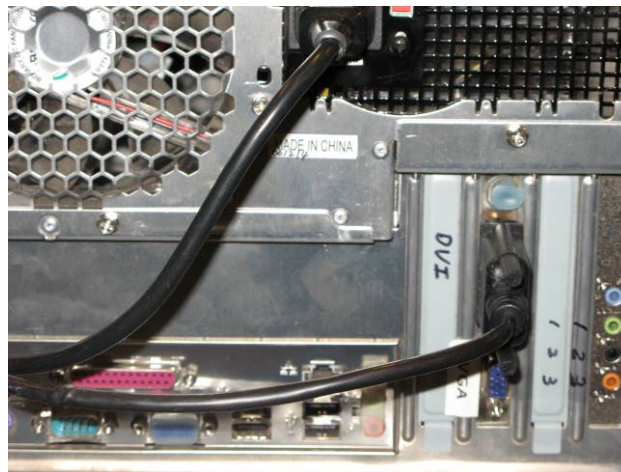

The Video Card is located parallel to the sound card. There are several plugs. You may use a Std. VGA monitor cable and plug it into the VGA port or if your monitor supports DVI plug that into the DVI port. Plug the other end into your Monitor.


Crafted with Pride in the U.S.A.

111 NAPCO DRIVE, TERRYVILLE, CT 06786 TOLL FREE 1-877-GAME TRX (1-877-426-3879)


www.HOTSEATINC.com

Instruction for your HotSeat Advanced Simulation PC(cont)

We have supplied a 5.1 cable with 1/8" mini connectors to be plugged into the sound card. They are numbered the ports, 1, 2, and 3. #1 is for the Front L/R speakers, #2 is for the Rear L/R speakers, #3 is for the Center and Subwoofer. We have assigned these in the Creative Sound console and set the system for 5.1 Surround Sound.

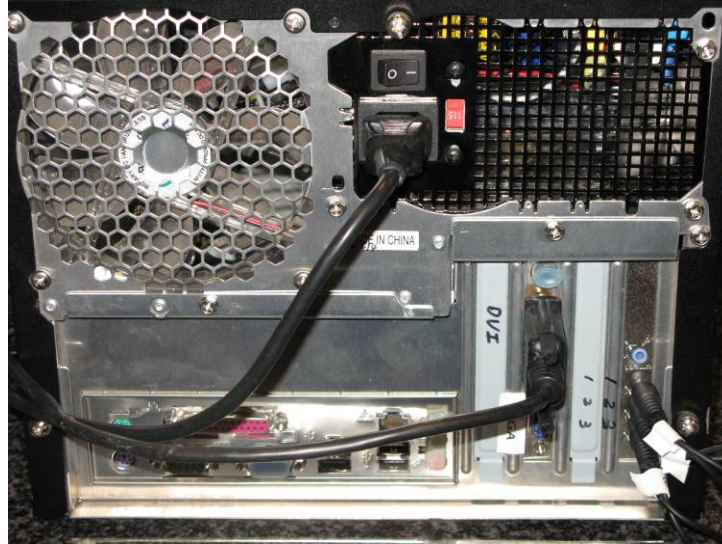

Locate the USB ports on both the front and back of the PC. Plug the base station for the wireless mouse and keyboard into any USB port. Insert the USB plug for the Wheel or Flight controls into any unoccupied USB port. (NOTE: if you are using a steering wheel, make certain to plug the power supply in to a 110volt outlet.)

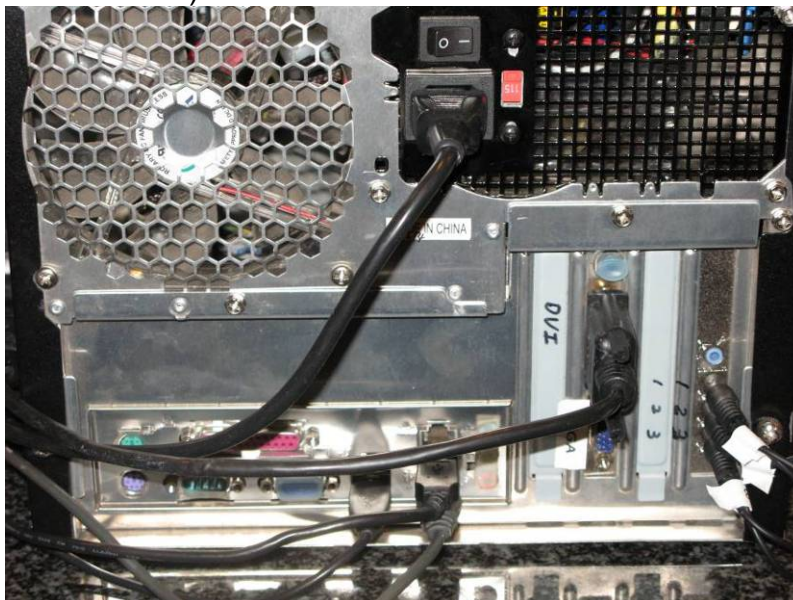

Crafted with Pride in the U.S.A.

111 NAPCO DRIVE, TERRYVILLE, CT 06786 TOLL FREE 1-877-GAME TRX (1-877-426-3879)

www.HOTSEATINC.com

Instruction for your HotSeat Advanced Simulation PC(cont)

Install the batteries into the remote control. Aim the remote at the center speaker located on the front of the chassis. Press the Orange power button once. 2 blue lights should come on for input#1 and adjust the volume by pressing + / - on remote aimed at center speaker.



If you are having a problem, please call us before it becomes a frustrating. We can be reached during normal business hours at 860-582-5031 X-0 and an operator will assist you.

Crafted with Pride in the U.S.A.

111 NAPCO DRIVE, TERRYVILLE, CT 06786 TOLL FREE 1-877-GAME TRX (1-877-426-3879)

www.HOTSEATINC.com